




Pharmaceuticals Packaging Manufacturing

- Manufacture medical-grade membranes for pharmaceutical packaging. Typical web speeds are 100 mpm to 150 mpm.
- System uses 6 independent Lane Markers to mark defects automatically (interfaced to an ISRA inspection system) and independently in one color (black) with FDA-approved food-grade water-based dye. Marks are typically several feet long; since each marker is independent, defect marks are retained only on the slit rolls where the defect actually occurred, leaving good material unmarked on adjacent slit rolls.

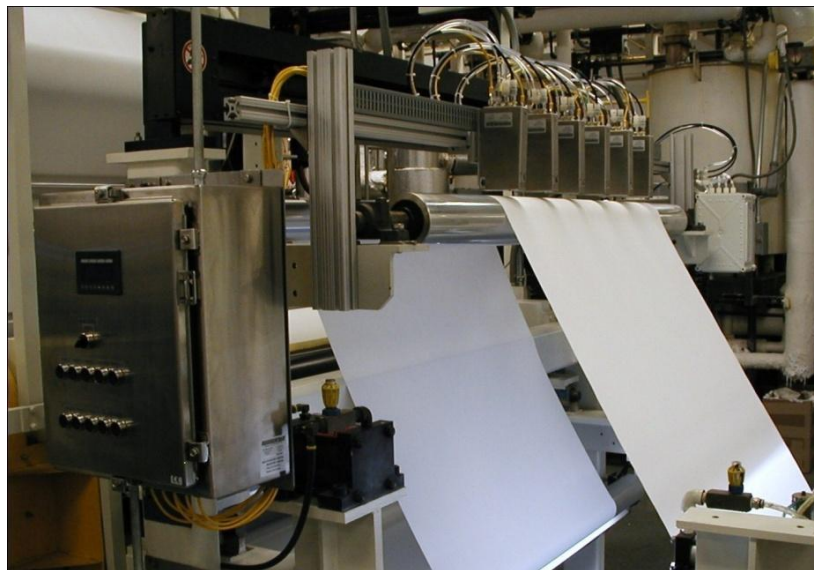

- The 2411-3c is a 1-color Defect Lane Marking system. The customer mounted his markers on extruded aluminum so that they could be easily repositioned if slitting lanes change.